


Microphone stand with fully programmable membrane switch, giving the option between push to talk, push to mute or latching without the need to change dip switches. Includes LED indicator to identify microphone status. Available in 5 Pin Male XLR output configurations.



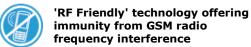

SPECIFICATIONS

Switching: Touch Pad Fully Programmable to PTT, PTM &

Latching

Red LED Indication:

3Pin XLR Input:

> PIN 1 = Ground PIN 2 = Phase +PIN 3 = Phase -

Output:

Power

S135 5Pin XLR, Has Remote Switching Ability

PIN 1 = Ground

PIN 2 = Control Input (activated in program 4

Height

option 2)

PIN 3 = PHASE -

PIN 4 = Switch Out (Logic low when switch

pressed)

PIN 5 = PHASE +**48V Phantom Power**

Requirements:

Finish: Satin black

Dimensions: Length Width

> 120mm 100mm 32mm (4.8")(3.94")(1.26")

With XLR: 60mm (2.36")

Weight: 636g (22.4oz) **Programming options**

Program mode (Press number of times for selection required)	Description	Option 1 (Press Once)	Option 2 (Press Twice)
1	Switch Type	Momentary	Latching
2	Switch Action	PTT (Normally Off)	PTM (Normally On)
3	Activation Tone	Off	On
4	Control Mute	On-Microphone muted at base. LED indicates live microphone	OffMicrophone muted externally. LED indicates Logic low

Switch operating Instructions

IT IS ESSENTIAL THAT MICROPHONES ARE NOT CONNECTED WHEN PROGAMMING

- 1) Apply power with switch pressed.
- 2) Unit gives regular flash for 2 seconds on LED to show set up mode entered.
- 3) Press switch the number of times of the programming mode you wish to check or change. The interval between key presses must be less than 1 second.
- After the mode has been selected the LED will flash the number of times of the option currently set. 4)
- 5) Press the switch the number of times of the option required. The interval between key presses must be less than 1 second.
- The LED will flash the number of times of the option already set. 6)
- 7) The unit then returns to stage 2, ready for setting more options.
- 8) The unit will return to normal operation after 5 seconds if the key is not pressed.